


Информационен лист | Номер на артикул: 210-836

Марк. табелки за бутони; за рамки, със закопчаване или лепене на място; 27 x 17,5 mm; сребрист

<https://www.wago.com/210-836>

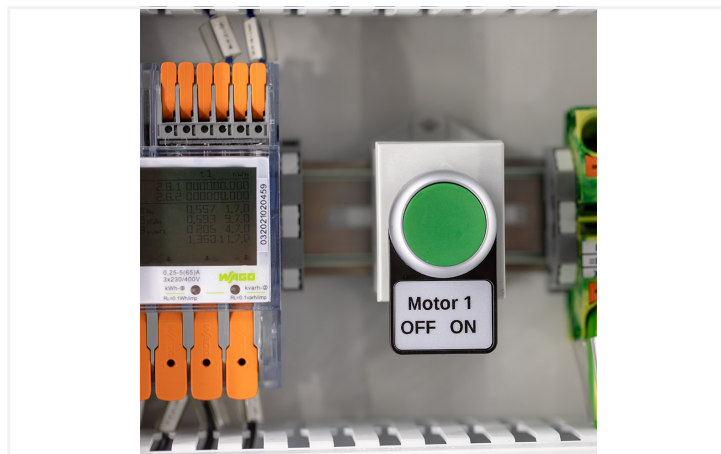

Цвят: ■ сребрист

Technical data

Suitable	за рамка за бутон Siemens
Marking method	Термичен трансфер
Marking	plain
Delivery form	Ролка
Delivery form configuration	350 markers/reel; 1 line
Printing device	Smart Printer (thermal transfer printer)

Physical data

Height	27 mm
Width	17,5 mm
Depth	0,65 mm
Marking surface	27 x 17,5 mm

Mechanical data

Mounting type	Snap-in or adhesive mounting
Smear resistance	във връзка с мастилена лента 258-5005

Material data

Color	сребрист
Material	Polyester
UV resistance	EN 60068-2-5:2010 Procedure B
Adhesive information	Acrylic; permanent; foamed
Halogen-free	Yes
Weight	110 g
Fire load	0 MJ

Environmental requirements

Ambient temperature (storage)	≥+22 °C
Relative humidity	40 ... 50 %

Commercial data

ETIM 8.0	EC001288
ETIM 7.0	EC001288
PU (SPU)	1 бр.
Packaging type	Торба
Country of origin	DK
GTIN	4055143965422
Customs tariff number	39191080888

Environmental Product Compliance

RoHS Compliance Status	Compliant, No Exemption
------------------------	-------------------------

Изтегляния

Environmental Product Compliance


Compliance Search

Environmental Product
Compliance 210-836



Documentation

Operating Instructions

210-852 Information on handling print material	1	28.08.2020	pdf	1004.72 KB	
--	---	------------	-----	------------	---

1 Съвместими продукти

1.1 Необходими аксесоари

1.1.1 Cover

1.1.1.1 Cover



Артикул №: 210-837

Капак; за рамки, закр. ч/з закопч.,
27x17,5 mm; безхалогенен; прозрачен

Бележки за инсталиране

Stick on frame



Remove the push-button label from the carrier film.



Stick the push-button label onto the push-button frame.



WAGO's push-button label is attached to the push-button frame. A cover cannot be applied.

Snap into frame



Remove the push-button label from the carrier film. Press and hold the pre-punched carrier film to do this.



Snap the push-button label, with the carrier film on the back, on to the push-button frame. Only the area of the push-button label outside the remaining carrier film is adhesive.



Optional: A cover may also be installed on a push-button frame equipped with latches.



Push-button label and cover are snapped on to the push-button frame.