


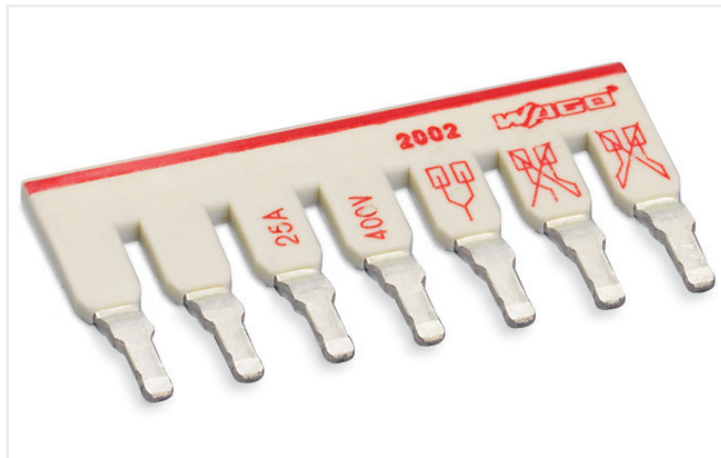

Цвят: ■ светло сив

Electrical data

Ratings per IEC/EN

Nominal voltage (III/3)	400 V
Rated impulse voltage (III/3)	6 kV
Rated current	25 A

Physical data

Width	35,1 mm / 1.382 inch
Jumper assignment	7-way

Material data

Note (material data)	Information on material data can be found here
Color	светло сив
Fire load	0.09 MJ
Weight	6 g

Commercial data



Product Group	22 (TOPJOB S)
eCl@ss 10.0	27-14-11-40
eCl@ss 9.0	27-14-11-40
ETIM 7.0	EC000489
ETIM 6.0	EC000489
PU (SPU)	25 Stück
Packaging type	Bag
Country of origin VKOrg Germany	DE
GTIN	4055143692304
Customs tariff number VKOrg Germany	85366990990

Изтегляния			
Documentation			
Additional Information		Bid Text	
Technical Section	pdf 2142.18 KB	2002-477	19.02.2019 xml 2.62 KB
		2002-477	27.04.2017 doc 24.00 KB

CAD/CAE-Data	
CAD data	CAE data
2D/3D Models 2002-477	EPLAN Data Portal 2002-477
	WSCAD Universe 2002-477
	ZUKEN Portal 2002-477

Бележки за инсталиране


Commoning

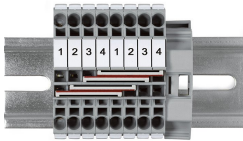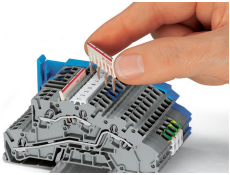

Orient the staggered jumpers' red stripes on the inside. Insert the staggered jumper and push down until it hits the backstop.


Commoning two potentials in one single jumper slot via extremely slim staggered jumpers.

Commoning

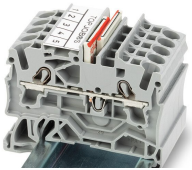


Orient the staggered jumpers' red stripes on the inside. Insert the staggered jumper and push down until it hits the backstop.

Commoning

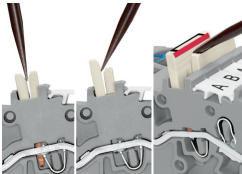


Removing a staggered jumper: Insert the operating tool between the staggered jumpers, then lift up the jumper.


Commoning

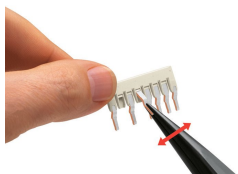

Staggered jumper (seven contacts)
Breaking off contact lugs. Individual jumper contacts can be broken off by bending them. The remaining piece of insulation will meet requirements for clearances and creepage distances.

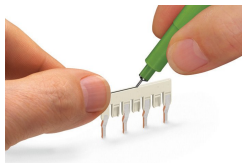

Staggered jumpers
Marking with a felt-tip pen.



Staggering jumpers in a single jumper slot:
Custom staggered jumpers can be created, e.g., for bridging over a terminal block with a different potential. Make sure that only one contact lug is in contact with the terminal block.
The contact lugs of the customized staggered jumpers contact the terminal blocks via the gaps created in the second jumper. Insert and press the ready-made jumper assembly into the jumper slot until it hits the backstop.